

	WP100	WP300	WP400	WP500	WP700
Canon	(IXUS, IXY) Digital1000 /900Ti/800IS/750/700, (Powershot SD) 200/300 /400/550/650/700/800/900	(IXUS, IXY) 600/500/450 /430/400 (Powershot S) 400/410, (Powershot A) 410/420/430 /450/460	(IXUS, IXY) 90/75/70/65/60 /55/50/40/30/10/i/ii/iii/i5 /i7zoom/izoom/V3/V2/L/L2 /300/330/30a/200a/D320 /S100/S200/850IS/900IS /IXY Digital Wireless (Powershot SD)30/40/100 /110/430/450/600/630/750 /1000, (Powershot S)300 /230/200/110/100 (Powershot A)400	(Powershot A) 60/70/75/80 /85/95/510/520/530/540 /550/560/570IS, (Powershot S) 60/70/80	
CASIO	S 100/500/600/600D/770, EX Z3/4/5/57/55/50/40/30 /500/600/1000/1050	QV R 61/51/41/40/4/3, EX Z10/110/120	EX Z 75/70/60	EX P 700/600	Exslim EX M 20/1/2, S 20/3/2/1, EX-V7
Panasonic			DMC FX 9/8/7/5/3/2/1/01 /07/50/10/30/12, F1/7, LS 2/1	DMC LZ 1/2, LC 80/70/50	
FUJIFILM	Finepix F440/450/455z	Finepix A345/350, F10zoom /11/20/30, F420/650, F31fd/40fd	Finepix A340/330/310/303 /203/700/600/610/800, F460/470	Finepix F 601, E 500/510 /900, A 900/820	Finepix Z1/2/3
hp		Photosmart M307/407/437 /527/537, R707/717		Photosmart M 517/636/735 /812/935, R 817	R837
Nikon		Coolpix 2200/3200/3700 /4100/4200/4600/5200 /5600/5900/7600/7900 /P3/4, L2/3/4/6	S200/500, L12/11/10	Coolpix 2000/2100/3100, P1/2, L1, P5000	Coolpix S1/2/3/5/6/7/7C/8 /9/50/50C
OLYMPUS	Camedia C470z, X600/500, FE5500/150/160, (µ, Stylus) 710/740/750 /760/810/1000/D630z /Ferrari model	Camedia C500z/480/370 /60z, X550/450/350/1/2/3	Camedia FE130/140/170 /180/200/220/230/240/250, C315z/310z, (µ, Stylus)10/15/20/25/30 /40/40digital/300/400/500 /600/700/780/800 /digital S/Mini/Verve S	Camedia C 1z/2/40/70/ 350z/460/7000z, X200/250, (µ, Stylus) 535/545/595z	(µ, Stylus) 700sw/720sw /725sw/730
PENTAX	(Optio) 50/S/S4/S4i/S5i/ S5n/S5z/S6/S7/SV/SVi/ T10/T20/T30/A10/A20/A30	(Optio) 30/60/330/430/S40 /S45/S50/S55/S60/330RS /430RS/E10/E20/E30	(Optio) M10/20/30	(Optio) S30/33L/33LF /330GS/230/750Z	
SAMSUNG	(Kenox, Digimax) X70/L70 /L77	(Kenox, Digimax) V3/4/5/6 /10/20/700/800, A4/5/6/7 /40/50/400, D4/5/6/7/103, S800/1000, Cyber410, (VLUU) NV10	(Kenox, Digimax) U-CA5/4 /3, X1/15wide/60/80, Q1/2 /25wide, L50/55W/700/73 /L74wide/L80, A55W, S500 /600/630/700/730/830/1030	(Kenox, Digimax) 360/370 /420/430/530, V 50/70, Cyber 300/400, α 5/7, D 60 /370/430/470/510/530/610 /3000/3100/4000, (VLUU) NV11, UX 4	(Kenox, Digimax) #1 /#1mp3/#11pmp/i5/i50mp3 /i6pmp/i7/i70/K50/K60 /D512S, (VLUU) NV3
SANYO		(Xacti VPC) AZ3/MZ31	(Xacti VPC) S60/7/6/4/3/1, E7		
SONY	(Cybershot)DSC-P100/120 /200, N1/2	(Cybershot) DSC-P150	Cybershot DSC-S40/600, W30/35/40/50/55/70/80/90 /100/200, L1, S650/700	(Cybershot) DSC-P 1/2/5/7 /8/9/10/71/72/73/92/93, S 60/90, W 1/5/7/12	(Cybershot) DSC-T1/3/5/7 /9/10/11/20/30/33/50/100
KONICA MINOLTA	(Dimage) E500	(Revio) KD-200Z/300Z		(Dimage) F100/200/300/, (Revio) KD-3300	(Dimage) X1
Kodak	(Easyshare) V530/550/803 /1003	(Easyshare) LS755/753/633, ONE, C763/663/613, JOC L-108	(Easyshare) C743/653/643 /533, LS743	(Easyshare) CX 7330/7530 /7430/6230/6330/7220, DX7630/7440/6440/6340 /4530/4330, LS443/C340 /C360	
KYOCERA		Fine cam S3, Yasica EZ Digital 5030	Yashica EZ Digital 5031	Fine Cam L3/30/3v/4/4v, S4/3R/5R/3L	
RICOH		Caprio RZ1/R1/RR660 /RR630		Caprio GX8/GX/RX /G4 wide/RR30	
Etc.	Rollei Prego DP4200, BenQ DC E53/520/510, Hitachi imaga HDC-531, Leica C-Lux1/C-Lux2	Minox DC8111, Rollei Prego DP8300/6300 /5300/DT3200, Mach power DX-550, Polaroid PDC3370, Praktica DCZ4.3, BenQ DC C40/C50, Toshiba Alegretto 3310	Toshiba Alegretto 3330, Hyundai DC-4300, Epson L-400/300	Parktica DCZ4.4, Toshiba PDR 5300, Premire DC 2302/3306/5330, Kenko Z510, BenQ DC5330 /S30, Kocom KDC-330, Hyundai HD-530, Hitachi HDC-331	Che-ez Foxz2 / moni-me